



SSV WORKS, 201 N. Rice Ave Unit A, Oxnard, CA 93030
www.SSVworks.com | Phone: 818-991-1778 | Fax: 866-293-6751

US2-C65

Universal Cage Mount

SSV Works 6.5" Speaker Enclosures

WARRANTY INFORMATION:

All SSV Works enclosures are covered by a limited lifetime warranty against defects in material or workmanship. All SSV Works Electronics are covered by a limited 1 year warranty against defects in material or workmanship. Labor for replacement of defective components is not covered. All SSV Works Speakers are covered by a limited 1 year warranty against defects in material or workmanship. Contact SSV Works for further warranty information.



Please read and understand these instructions completely before installation to avoid possible injury, or damage to the accessory or vehicle.

TOOLS NEEDED FOR INSTALLATION

- 5mm Allen Key
- 8mm Open End Wrench
- 3mm Allen Key
- #2 Phillips Screwdriver

Placement of the pod depends on what type of roll cage you have (factory or aftermarket) and your preference of where you want the pods to be installed. In these instructions, we have installed them on the outside vertical bars at the back of the roll cage.

PARTS LIST IMAGES



1. US2-C65 Enclosures (1 pair)



2. Dual Mounting Ring Adapter x 2




3. Ring Clamp x 4



4. M6 Hex Head Bolts & Washers x4



5. M6 Allen Socket Head Bolts & Washers x4

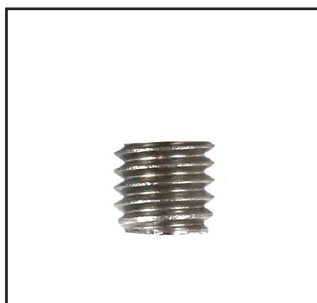

6. M6 Set Screws x 8



7. #7 Screws x 8
(comes with unloaded pods only)

INSTALLATION NOTES

It is recommended to wrap the bag that the clamps come in around the cage before you slide the clamp onto the cage to prevent scratching.


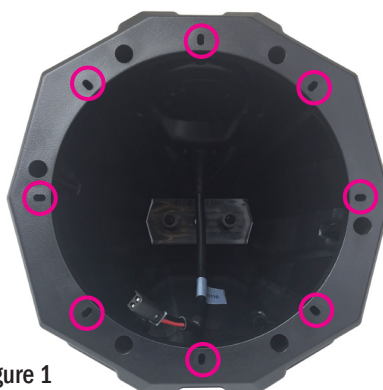



Figure 1

FOR UNLOADED ENCLOSURES:

If using a different brand speaker, first see if the speaker holes line up with the screw bosses (circled in pink on Figure 1). Be sure to use the 8 supplied SSV Works #7 screws when installing your own speaker.

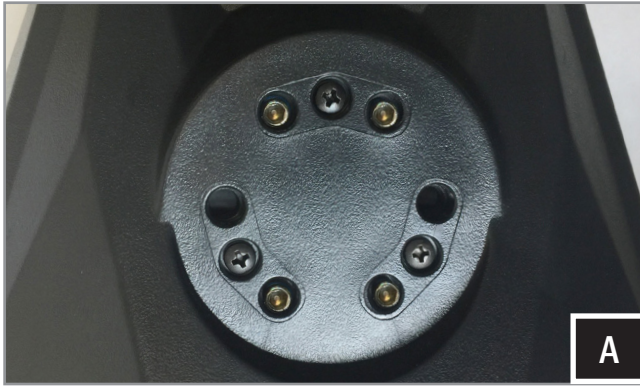

A. Find the best orientation for the speaker on your bar and screw in the Set Screws in the OPPOSITE holes of where the clamp will install into.

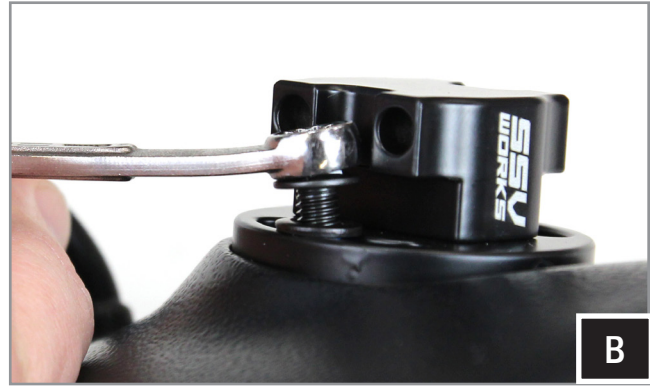

B. Loosely install the clamp base to the cage mount pod with the two (2) M6 hex head bolts and washers, place the cage mount pod in the desired mounting location on the vehicle.



C. Place both ring mounting clamps on the cage using the plastic bag to prevent scratching, place the cage mount pod in its final mounting location and secure to the clamps using the two (2) M6 allen socket head bolts and washers with a 5mm allen key.



D. Position the speaker to your liking and tighten the hex head bolts by hand with a 8mm wrench.



E. Route the speaker wire away from any moving parts and any sharp metal, then connect to the amplifier.

Connecting the US2-C65 using the pre-installed, two-pin connector will require an optional SSV Works plug-&-play harness (WP-H1149 - sold separately). If you are not using the WP-H1149 harness, simply cut off the two-pin connector and follow the wiring instruction below.

WIRING INSTRUCTIONS

For proper sound, ensure the speaker polarity is correct connect the "+" to the "+" and the "-" to the "-" from the speaker wire to the amplifier. If using with an SSV Works complete system refer to the amplifier wiring instructions for more detailed wiring information.

